## TECHNICAL FOCUS ON HVS MUCK SPREADERS

Technical guide for making the right purchase






# **HVS MUCK SPREADERS**


### ALL-TERRAIN, LOWERED "MOUNTAIN"-TYPE MACHINES

Standard 🕗 or optional equipment 🔂

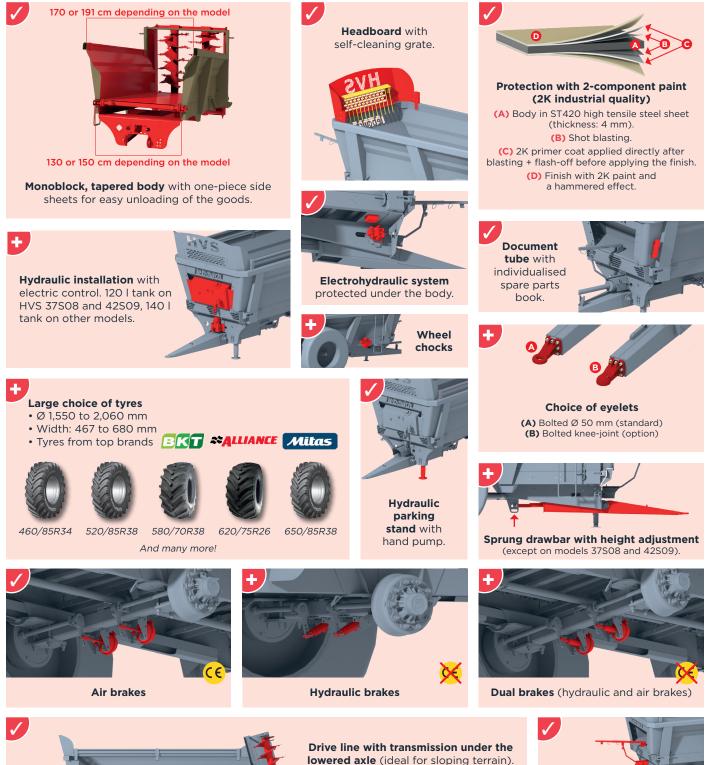


Wear rings on rear bearings. Free wheel clutch on rear universal joint. Sealing flaps at the front and on the spreading table.

Wide-angle P.T.O.-shaft with cam security and hose holder with adjustable length and angle.

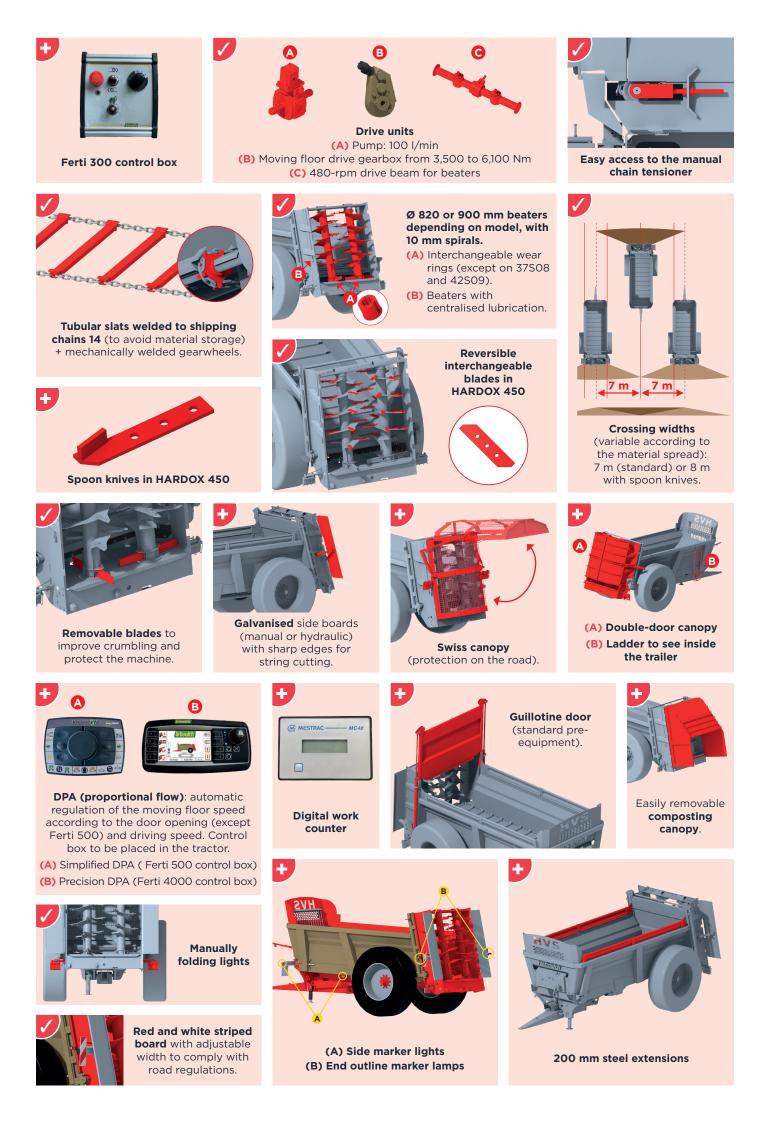

## HVS MUCK SPREADERS ALL MODELS

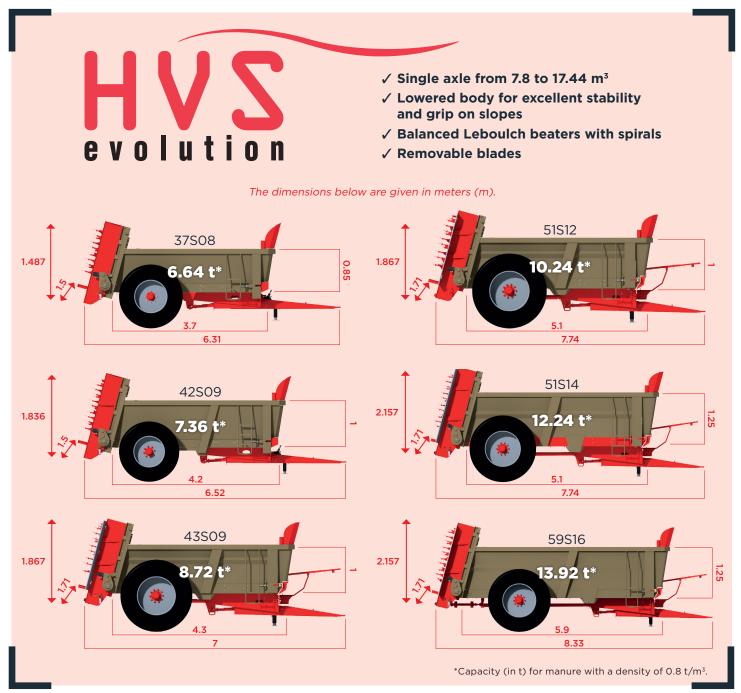

#### Understand the model names:

The first 2 digits correspond to the body length up to the door (in dm).
The letter indicates the number of axles: S = single axle.
The last 2 digits indicate the volume of manure (in m<sup>3</sup> without extensions).
Example: the model 37508 corresponds to a muck spreader with a body length of 3.7 m up to the door, one axle and a volume of around 8 m<sup>3</sup> without extensions.



**JLB** leboulch

Route de Guernanville, 27330 La Vieille-Lyre (France) Tel.: +33 2 32 30 67 47 E-mail: info@leboulch.com www.leboulch.com

January 2024. Non-contractual document. Data can be modified without prior notice. Pictures do not necessary correspond to the standard equipment